



SPECIALISED  
COVERS

To Protect & Preserve

## PRODUCT MANUAL & FITTING GUIDE



### tow pro lite

TYPE: SEMI - FIT

#### EACH TOW PRO LITE COMES WITH THE FOLLOWING :

- 16 side securing straps & buckles (8 either side)
- 1 HITCH STRAP & buckles
- 2 STEADY SAFETY STRAPS & buckles
- Storage bag
- 1 Year manufacturing warranty
- Built in LED lights

#### FEATURES & BENEFITS OF THE TOW PRO LITE :

- 100% waterproof & breathable fabric
- UV protected fabric
- Protects from stone chips & cracked windows
- Prevents road dirt & exhaust fume debris build up
- Protects from insect residue
- UK manufacture & support
- Suitable for 90% of UK Caravans up to 2.5m wide

#### IMPORTANT: CARE INSTRUCTIONS

Before you fit your new TOW PRO LITE please ensure the front of your caravan is clean and that dirt is not trapped between the cover and the caravan which could potentially cause damage.

When cleaning the TOW PRO LITE we advise, for best results and for the long term benefit of the product, that you use a damp cloth in warm, mild soapy water. Allow to dry naturally.

**DO NOT CLEAN IN ANY WASHING MACHINE OR DRY CLEAN.**



## BEFORE FITTING YOUR COVER PLEASE NOTE

Take a moment to familiarise yourself with the product.

- Two awning channels with openings are required.
- Before using your cover, you will need to pull the plastic tab out of the two LED Eye lights to activate. To do this, simply remove the back case, and replace once the tab has been removed. You may eventually have to replace the batteries of your LED Eye lights. To do this, simply remove the back casing and replace with 3 AAA batteries.
- If your caravan has an awning stopper, remove any awning tape with a pair of cutters to the size of your stopper, to ensure the TOW PRO LITE will sit flush to your A-frame. *Please see Page 5 Step 4*
- For an easy installation, we recommend using two people.
- Make sure the inside of the TOW PRO LITE doesn't come into contact with the ground to ensure that it remains free of any dirt or grit which may damage your caravan.
- You can feed the TOW PRO LITE up or down your awning channels, depending on the model of your caravan.
- It is important to remember that the cover is held on through the awning channels so you don't need to over tighten the straps.
- To keep your TOW PRO LITE clean, sponge down with mild soapy water.
- For non UK manufactured caravans please check with customer service as to whether the Tow Pro Lite is suitable.

### IMPORTANT NOTICE

The caravan front must always be clean and free from dirt/grit and other road debris before fitting any TOW PRO product, if this is not done properly damage may be caused through abrasion to the caravan front from trapped dirt between the cover and caravan.

### PLEASE NOTE

The TOW PRO cover range is designed specifically to protect your caravan whilst being towed. It is **NOT** intended to be used as a storage cover or to be left affixed to the caravan whilst it is being stored. Please remove this cover once you have reached your destination.



## LED EYE LIGHTS FITTING

With your TOW PRO LITE we have added an accessories pack which includes 2 LED Eye lights, 4 easy clip rings, and 2 velcro light covers.

Below are instructions of how to fit your LED Eye lights, followed by instructions of how to reveal factory fitted caravan lights.




### STEP 1

Remember to pull the plastic tab out of the two LED Eye lights to activate. Simply twist the back panel of the LED Eye lights to gain access to the AAA batteries.



### STEP 2

Make sure the LED Eye lights are working correctly by simply pushing the centre of the light.

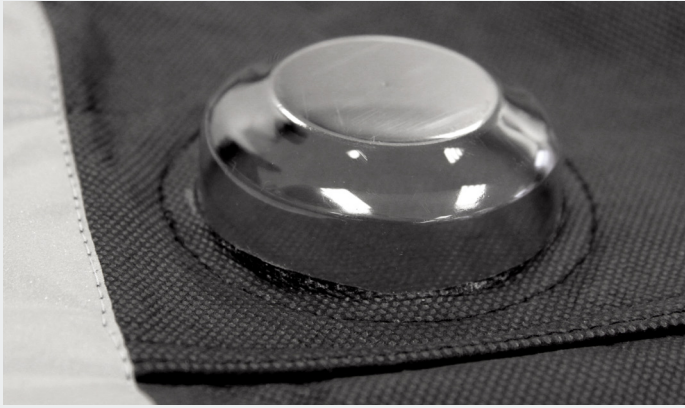

## STEP 3

The two LED eye lights fit into the Eye cups on the front of the TOW PRO LITE. This will protect the lights while towing.



## STEP 4

Peel the back panels of the TOW PRO LITE to access the rear of the Eye cup. This will allow the Eye lights to slip in easily.



## STEP 5

Slot the LED Eye light into the Eye cup face down for display and access at the front of the cover.



## STEP 6

Re-seal the panel, which will keep the Eye light in place and secure.



## STEP 7

Once secure the Eye light is ready to use and ready for towing. If you need to change or adjust the light simply open the back panel again for access.



## STEP 8

Make sure to test your LED Eye light once it is placed into the cover - check the LED Eye lights are working correctly before every journey.

**NEED HELP? CALL OUR EXPERTS FOR ASSISTANCE**

Office hours: Mon – Fri 9am – 5pm, Sat – Sun CLOSED

## FITTING THE COVER



### STEP 1

Insert the TOW PRO LITE into the awning channels on either side of the caravan - the same way you would do an awning. Slide the cover either up or down the channels, depending on your opening's location, until it sits neatly on the A-frame section.

### STEP 2

Once the cover has been fitted into the awning channels, make sure the top and bottom triangles are central to your caravan. For ease of fitting, make sure all clips and straps are undone prior to this.



### STEP 3

Once you're satisfied the cover is central connect up the top clips on the left and right hand side, adjusting the straps accordingly to create tension across the top of the cover.

### STEP 4

If your caravan has a stopper at the end of the awning channel you will need to make an adjustment to the awning tape to make the cover sit flush. Fit the cover as normal bringing the cover right down onto the A-frame.



### STEP 5

The stopper will prevent the cover going fully down. You now need to pull the awning tape out of the channel and over the stopper. This will allow the cover to sit onto the A-frame.

### STEP 6

You will now have a section of awning tape and cover sticking out from the channel. This cannot be flattened as the tube is too thick. Therefore you need to cut the tube section from the tape.

## FITTING THE COVER CONT.



### STEP 7

Simply cut along the tube edge but not the tape section the height of the awning stopper. Once the tube has been removed this will allow the excess awning tape to lay flat over the stopper.




### STEP 8

Once the top straps are secure, lay the bottom flaps of the vented T-Fit system flush to your caravan body and allow the main body of the cover to fasten to the velcro strip.



### STEP 9

Once the vented flaps are secure to the caravan, connect up the lower four clips and buckles and adjust the straps to tighten. Be careful not to pull them too tight as this may damage the cover.

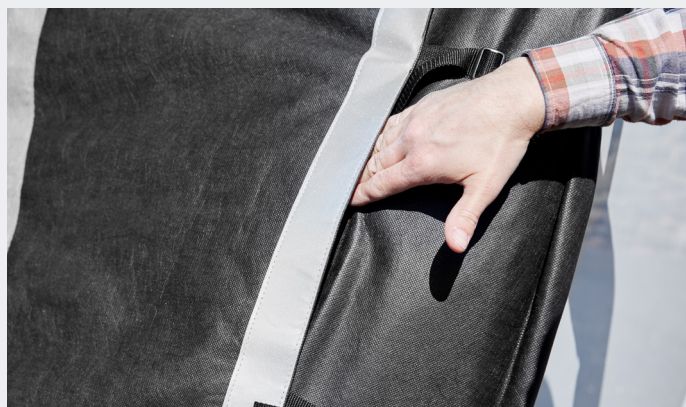

### STEP 10

Once the four bottom clips have been fastened and adjusted, work your way up both sides ensuring any excess fabric is pushed under the central section of the cover.



### STEP 11

Check you are happy with all the straps length on both sides adjust on either side so the cover sits centrally over the A frame. This may take some time to get the best position but once done the straps won't need to be altered again.



### STEP 12

Now the tape can lay over the stopper flat. Fold the excess tape under the corner and with the additional buckle and strap in the corner, secure the excess under the caravan around the steadies.


**NEED HELP? CALL OUR EXPERTS FOR ASSISTANCE**

Office hours: Mon – Fri 9am – 5pm, Sat – Sun CLOSED



## STEP 13

Each strap comes with its own adjustable D-Clip. Thread the excess webbing through the clip and adjust where appropriate. Tuck any excess webbing into the main body or cut off as necessary.

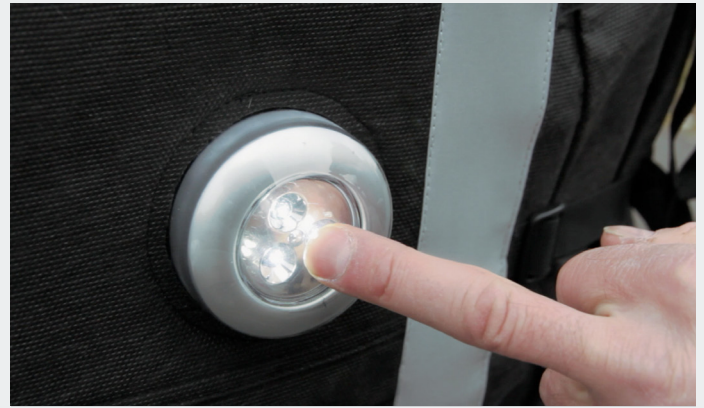

## STEP 14

To activate the LED Eye lights, simply push the centre. Repeat to turn off.



## STEP 15

With the cover adjusted and firmly in place, you now need to secure the A-Frame strap and the two steady straps on either side. Locate the straps and insert one end into the female buckles on all three.



## STEP 16

With one buckle connected, pass the strap under the steady of your caravan, and back through to the other buckle. Repeat for the other side **and do the same for the A-Frame, going over any brake cables.**



## STEP 17

There will be a spare female buckle in the corner on both sides as we attach two to allow for different steady positions. The spare buckle can be removed at this point if you prefer. The cover is now secure and all excess material is fastened down.



## STEP 18

You are now ready to tow. Removing the TOW PRO LITE is easy. Simply undo the clips on one side and slide out of the awning channels. Fold up the cover, and place back into your storage bag.

## CUSTOMISING FOR FIXED LIGHTS



### STEP 1

Once you have marked the new light on the TOW PRO LITE cut around the outside of the marking. This may need to be trimmed and refined to secure the rings in place and fit accurately.



### STEP 2

Both the rings provided twist together when face to face, and will attach securely to the fabric.



### STEP 3

Place one of the rings on the underside of the TOW PRO LITE, making sure it fits nicely through the trimmed opening.



### STEP 4

Place the opposite corresponding ring fitting to create a secure opening for the factory fitted caravan light to shine through.



### STEP 5

Once secure the Eye light is ready to use and ready for towing. If you need to change or adjust the light simply open the back panel again for access.



### STEP 6

Make sure to test your LED Eye light once it is placed into the cover. Check the LED Eye lights are working correctly before every journey.

**NEED HELP? CALL OUR EXPERTS FOR ASSISTANCE**

Office hours: Mon – Fri 9am – 5pm, Sat – Sun CLOSED

T: 01943 864 646 E: [info@specialisedcovers.com](mailto:info@specialisedcovers.com) [specialisedcovers.com](http://specialisedcovers.com)