



SPECIALISED
COVERS

To Protect & Preserve

PRODUCT MANUAL & FITTING GUIDE



tow pro elite

TYPE: TAILORED FIT

EACH TOW PRO ELITE COMES WITH THE FOLLOWING:

- 8mm thick body armour material
- QUICK ZIP SYSTEM to aid fitting
- 2 CLEAR EYES for caravan lights
- ELASTIC WINGS to aid cover tension
- Storage bag
- 1 Year manufacturing warranty
- Locker box access
- Easy grab handle access
- Window access

FEATURES & BENEFITS OF THE TOW PRO ELITE :

- 100% Waterproof body armour material
- UV protected fabric
- Protects from stone chips & cracked windows
- Prevents road dirt & exhaust fume debris build up
- Protects from insect residue
- UK manufacture & support

IMPORTANT: CARE INSTRUCTIONS

Before you fit your new TOW PRO ELITE please ensure the front of your caravan is clean and that dirt is not trapped between the cover and the caravan which could potentially cause damage.

When cleaning the TOW PRO ELITE we advise, for best results and for the long term benefit of the product, that you use a damp cloth in warm, mild soapy water. Allow to dry naturally.

DO NOT CLEAN IN ANY WASHING MACHINE OR DRY CLEAN.

NEED HELP? CALL OUR EXPERTS FOR ASSISTANCE

Office hours: Mon – Fri 9am – 5:00pm,
Sat – Sun CLOSED

T: 01943 864 646

E: info@specialisedcovers.com

specialisedcovers.com



SPECIALISED COVERS

BEFORE FITTING YOUR COVER PLEASE NOTE

Take a moment to familiarise yourself with the product.

- Please note the cover does require two awning channels and an opening in both to fit the cover.
- It is imperative when fitting your new Tow Pro product that the cover is inserted into the BOTTOM awning access points with the QUICK ZIP SYSTEM on the OFFSIDE awning tape fully undone prior to fitting and subsequently closed.
- Two person fitting is recommended (product can be fit by one person if necessary).
- It is important to remember that the cover is held on through the awning channels and clips, no further adhesion materials or methods are necessary.
- To keep your TOW PRO ELITE clean, sponge down with mild soapy water.


So you know, any creases across the cover caused by folding when being stored do fall out and occur due to the nature of the material used.

IMPORTANT NOTICE

The caravan front must always be clean and free from dirt/grit and other road debris before fitting any Tow Pro product, if this is not done properly damage may be caused through abrasion to the caravan front from trapped dirt between the cover and caravan.

PLEASE NOTE

The Tow Pro cover range is designed specifically to protect your caravan whilst being towed. It is **not** intended to be used as a storage cover or to be left affixed to the caravan whilst it is being stored. Please remove this cover once you have reached your destination.

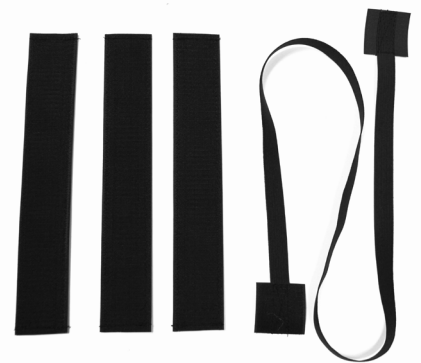

IMPORTANT: CARE INSTRUCTIONS

The TOW PRO ELITE comes with an additional accessory pack that helps to stabilise the cover whilst utilising its function of allowing window access.

It comes with 3 velcro strips, and an elasticated tension strap with two velcro tabs either end. This feature should only be used when the caravan is stationary. (See page 5)

PRODUCT MANUAL & FITTING GUIDE

QUICK REFERENCE INSTRUCTIONS

STEP 1

Remove the cover from the storage bag. Unfold in the correct orientation (A-frame cut out at the bottom) and sit on the A-frame ready for fitting making sure the inside of the cover does not touch the ground.

STEP 3

Then slide the NEARSIDE awning tape which is fully attached to the cover up the awning channel, again starting at the bottom of the caravan awning and working your way up.

On certain caravan makes you may have to slide the product further up to get all the awning tape in the channel and then slide it back down.

STEP 5

Position the cover so the A frame cut out is sat neatly and the cover looks square. Then zip up the Quick Zip System and secure the Quick Fit Clips under the caravan valance underneath. Secure the top clips that are attached at either side of the cover above the window. These are there to provide additional tension to the cover across the top section.

STEP 2

Undo the Quick Zip System on the OFFSIDE awning tape on the cover (it unzips from the top down). Insert the tape into the channel and feed up the height of the caravan.

STEP 4

If 2 people are fitting the cover slide the two awning tapes, up the awning channel at the same time.

The awning tape should fit to the bottom of the awning track and finish either on the stopper if your caravan is fitted with one or, to the bottom so the position of the A-frame cut out is sat correctly. The driving lights should be seen through the CLEAR EYES sections.

STEP 6

Finally fasten the A-frame strap underneath the A-frame ensuring it goes above your brake cable.

To gain access to the locker box release Zip Covers on either side and unzip. On certain Caravan makes please note before unzipping ensure you release the Quick Fit Clips on that section.

For the grab handle access release the zip located in the Zip Socks on the cover.

To gain access to the window release Zip Covers from top sides, unzip and drop panel down.



FITTING THE COVER

STEP 1

Place the Tow Pro Elite across the front of your caravan sitting across the A-frame. On the offside of the cover, undo the full height zip to the bottom. Slowly begin to slide the awning tape up the channel until the full length is fitted.



STEP 2

Walk around to the near side of the caravan keeping your hand on the main body of the cover pressed to the window. Then feed the awning tape into the channel from the bottom slowly sliding it to the top. Walk back to the offside and zip.



STEP 3

Ensure the cut away A-frame section sits neatly over the A-frame and is straight, adjust accordingly. Check the caravans lights are clearly visible through the covers Clear Eyes.



STEP 4

Once the cover is in the correct position, pull the Quick Fit Clips out of their pockets and under the front of the caravan and secure in place.



STEP 5

Clip the elasticated Quick Fit Clips under the lip of the caravan as shown. These are designed to create tension and prevent dirt getting underneath the cover.



STEP 6

Ensure that all of the covers zips are fastened and secured by the Velcro® tabs.

NEED HELP? CALL OUR EXPERTS FOR ASSISTANCE
Office hours: Mon – Fri 9am – 5:00pm, Sat – Sun CLOSED

T: 01943 864 646 E: info@specialisedcovers.com specialisedcovers.com



STEP 7

It is extremely important that when fastening the A-frame strap that it is passed OVER the brake cable. This ensures that it doesn't affect the safety of the vehicles when towing.

STEP 8

Once the strap is safely in place under the A-frame, simply fasten the top buckles and adjust accordingly, being careful not to over tighten the straps. You are now ready to tow!



FEATURE 1

The Tow Pro Elite comes with additional features to maximise your cover's usability when static. By undoing the top zip sections, your caravan's front window can be exposed.

FEATURE 2

Affix the three velcro strips equal distance across the underside of the cover. Due to the nature of the material, the velcro will stick by itself. Now press it firmly against the caravan, allowing the velcro to hold the folded section in place.



FEATURE 3

To make the cover more stable in windy conditions, affix the male velcro tabs on the elasticated tension strap to the female velcro tabs on the under side of the two zip covers situated at the top of the van. The strap is only to be used when the caravan is stationary and the window flap is down.

FEATURE 4

Once the elasticated tension strap is fitted across the top of the window as shown above and the window panel is folded down, your cover should look like this.

THE FEATURES CONT.



FEATURE 5

Pull the zip from its zip sock and pull the zips up or down enough to access the grab handles. This enables you to manoeuvre your caravan without needing to remove the cover.

FEATURE 6

The bottom zip sections are designed to allow easy access to your caravans locker box. Please note all locker openings are different in shape and size due to the different style of lockers. The appropriate shape will be applied for your caravan.

REMOVING THE COVER



STEP 1

Wipe off any dirt or grit before removing the cover to ensure minimal dirt transfer. Remove the cover by simply reversing the fitting process. Ensure all of the clips and buckles are unfastened and slowly begin to slide the cover down the awning channels.

STEP 2

Once removed from the caravan zip up the offside section and fold the cover trying to keep the inside as clean as possible and away from the floor. The cover can now be placed back into its storage bag ready for your next trip.

PLEASE NOTE

When fitting the elastic tension strap, be sure to apply equal tension at both ends of the strap, being careful to avoid any sudden release of the strap as this could cause injury.

FEATURES & BENEFITS:

The tailored Tow Pro Elite comes complete with clear PVC windows to allow the caravans own lights to be visible when towing at night. Also to make fitting a seamless process we have included quick fit clips that secure onto the body work and waterproof stretchy wings that create the tension across the front of the cover.

The cover also comes complete with locker box, window and grab handle access as standard. All of which culminates in a stylish finish and the perfect combination of form and function.

WHAT MAKES THE DIFFERENCE

- 8mm thick body armour material
- QUICK ZIP SYSTEM to aid fitting
- 2 CLEAR EYES for caravan lights
- ELASTIC WINGS to aid cover tension
- Storage bag
- 1 Year manufacturing warranty
- Locker box access
- Easy access grab handles
- 100% Waterproof body armour material
- UV protected fabric
- Protects from stone chips & cracked windows
- Prevents road dirt & exhaust fume debris build up
- Protects from insect residue
- UK manufacture & support



SPECIALISED
COVERS

8MM THICK BODY ARMOUR

WHAT MAKES THIS MATERIAL PERFORM SO WELL?

The Tow Pro Elite is the only towing cover in the range that is manufactured from our Body Armour material. This material is what we use for Bentley and McLaren for their driving covers that go through extreme test conditions.

The material is waterproof, extremely durable, UV stabilised and has a protective PVC outer layer backed to a soft non-scratch Velcrotex 8mm fleece lined foam material for heavy impact absorption. This is the ultimate in protection and is supplied to all Australian Baileys, Swifts and Elddis models as standard. The cover also comes complete with locker box, window and grab handle access as standard. All of which culminates in a stylish finish and the perfect combination of form and function.



SPECIALISED
COVERS

To Protect & Preserve

T: 01943 864 646
E: info@specialisedcovers.com
specialisedcovers.com

COMPLETE YOUR PROTECTION



WITH A TAILORED STORAGE COVER

Waterproof and Breathable

UV Protected Treatment

Frost Protection

Access to Caravan Whilst Covered

Tree Sap Resistant

Shield From Bird Droppings

3 Year Guarantee

Extensive Pattern Database

Offer Code: SCOFFER

 **MADE IN
BRITAIN**